



USER MANUAL



In Studio with Tunde Oyeyin

TABLE OF CONTENTS

SAFETY INFORMATION	04	Connecting to Wifi	14
NOTICES	05	Connecting to Ethernet	14
SPECIFICATIONS	06	Logging In	15
Bike Specifications	06	Adding a Rider	15
Touchscreen Specifications	07	Peloton 101	15
SETTING UP YOUR BIKE	09	Joining a Ride	15
Location Requirements	09	THE CLASS SCREEN	16
Moving The Bike	09	MAINTENANCE AND CARE	17
Seat Height	10	After Each Ride	17
Seat Depth	10	Every 3 to 5 rides	17
Handlebar Height	11	Every 15 to 20 Rides	18
Proper Body Position	11	Annually	19
Clipping In and Out	12	BIKE ASSEMBLY	20
Adjusting Resistance	12	Bike Parts	20
GETTING STARTED	13	Spare Parts	23
Plugging In	13	Assembly	24
Powering On and Off	13	WARRANTY	27
		SUPPORT	31

⚠ CAUTION Read all precautions and instructions in this manual before using this equipment. Improper use or maintenance can void the warranty. Keep this manual for future reference. The information in this manual may not reflect recent updates as we continue to improve our product. Please see onepeloton.com/manuals for the latest version of the manual.

SAFETY INFORMATION

Read all safety information before operating the bike. It is the owner's responsibility to ensure that users are aware of all warnings and precautions.

Consult a physician before beginning a new fitness plan. Incorrect or excessive training can result in serious injury.

If you experience faintness, chest pain, or shortness of breath, stop exercising immediately and consult a physician.

Metrics on the screen, including heart rate monitoring, may be inaccurate. Values should be used for reference only.

This bike has a direct driven flywheel. If the flywheel is moving, the pedals are moving. Stop by reducing pedaling frequency in a controlled manner or by using the emergency brake. Do not remove your feet from the pedals until the flywheel stops moving.

The resistance knob can be used as an emergency brake. To stop immediately, push down on the resistance knob.

Use caution when mounting and dismounting.

To prevent injury, always adjust the seat and handlebars to your personal requirements.

Children under the age of 14 and persons with reduced physical, sensory, or mental capabilities that impair the safe use of the bike must not use the bike. Keep children and pets away from the bike at all times.

Children over the age of 14 and persons with a lack of experience and knowledge must be given supervision or instruction before using the bike.

Do not allow children to perform maintenance or to play with the bike. Always fully engage the brake when the bike is not in use.

Keep hands, loose clothing, shoelaces, and accessories away from moving parts. Do not insert objects into openings on the equipment.

The bike is equipped with Delta-compatible pedals. Always cycle using footwear equipped with appropriate cleats.

Perform regular maintenance for optimal performance and longevity. To

ensure safety, the bike must be checked for wear and damage on a regular basis.

Replace any damaged or worn parts immediately. Do not use the bike until the repair is performed.

Use only original parts from the manufacturer. Changes or modifications to this unit not expressly approved by Peloton could void the warranty.

Always unplug the bike immediately after use and before cleaning or performing maintenance. Service other than the procedures described here must be performed by an authorized technician.

The bike should not be used by persons exceeding 297 lb in weight.

This bike is for indoor home use only. Do not store the bike outdoors, near water, or at high humidity levels.

This bike is for home use only. Do not use in a commercial setting. Use the bike only for its intended purpose.

NOTICES

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device must not cause harmful interference, and (2) this device must not accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1 Reorient or relocate the receiving antenna.
- 2 Increase the separation between the equipment and receiver.
- 3 Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- 4 Consult the dealer or an experienced radio/TV technician for help.

CAUTION:

- 1 To comply with FCC RF exposure compliance requirements, a separation distance of at least 20 cm must be maintained between the antenna of this device and all persons.
- 2 This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.



This product is ANT+™ certified and is compatible with ANT+ sensors that support heart rate monitoring.

DISTRIBUTED BY:

US/CANADA
Peloton Interactive, Inc.
441 9th Ave, 9th Floor
New York, NY 10001
United States

UK
Peloton Interactive UK Limited
110 Long Acre
Covent Garden
London WC2E 9LH
United Kingdom

EU
Peloton Interactive Deutschland GmbH
c/o WeWork Neue Schönhauser Str. 3-5
Neue Schönhauser Straße 3-5
10178 Berlin
Germany

AUSTRALIA
Peloton Interactive Australia Pty Ltd
20 Martin Place
Sydney NSW 2000
Australia

SPECIFICATIONS





SPECIFICATIONS CONTINUED

BIKE

FOOTPRINT : 4' L x 2' W

WEIGHT : 138 lbs

HEIGHT : 4' 10"

USER HEIGHT RANGE : 4'11"-6'5"

MAX USER WEIGHT : 297 lbs

WEIGHT HOLDER CAPACITY : 3 lbs

TOUCHSCREEN

21.5" 1080p HD touchscreen


WiFi 802.11 a/b/g/n/ac / 100 Mbps Ethernet

16 GB internal flash storage

ANT+™ wireless / Bluetooth® 4.0


2x10 watt stereo speakers

SETTING UP YOUR BIKE

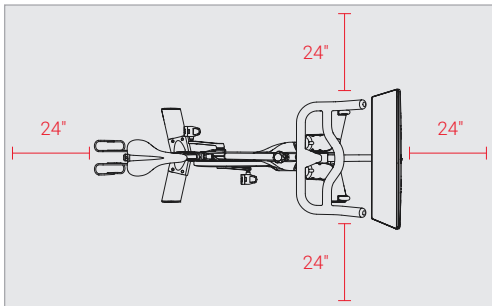

LOCATION REQUIREMENTS


- Place the bike on a solid, level and horizontal surface
- Use a mat to avoid damage to the bike and floor
- Allow a clearance of 24" (60 cm) on each side of the bike

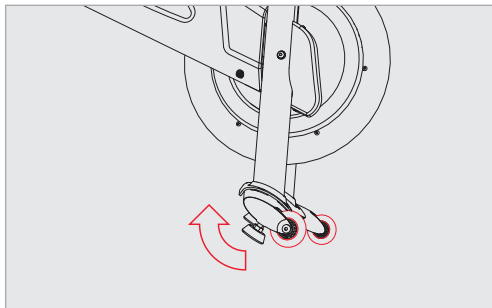

MOVING THE BIKE

- Tilt the bike forward onto the wheels. Lift the rear stabilizer while a second person holds the handlebars
- Carefully roll the bike to the new location. Avoid uneven surfaces
- If the bike rocks after being set down, unscrew each leveling foot until it rests firmly on the floor


SETTING UP YOUR BIKE CONTINUED

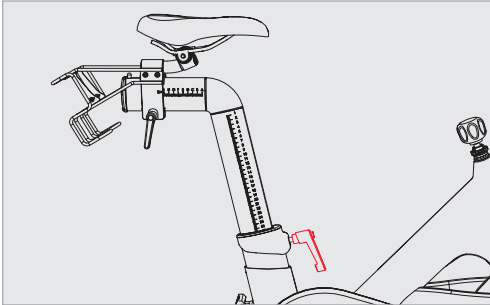

SEAT HEIGHT

Set the seat height to line up with the top of your hip bone.

- Turn L-handle counterclockwise to loosen
- Raise or lower seat
- Turn L-handle clockwise to tighten

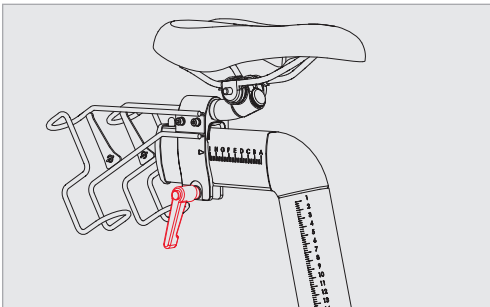


SEAT DEPTH

Set the seat depth so that the distance between seat and handlebars is equal to the distance between your elbow and fingertips.

- Turn L-handle counterclockwise to loosen
- Move seat forward or back
- Turn L-handle clockwise to tighten


⚠ CAUTION To prevent injury, always adjust seat and handlebars to your personal requirements. Tighten all adjustment handles before using the Peloton Bike. Projecting adjustment handles could interfere with your movements. Do not exceed maximum adjustment marks on seat and handlebar posts and sliders. If any adjustment handle sticks out sideways, pull the handle out, rotate it to point down, and then release it.

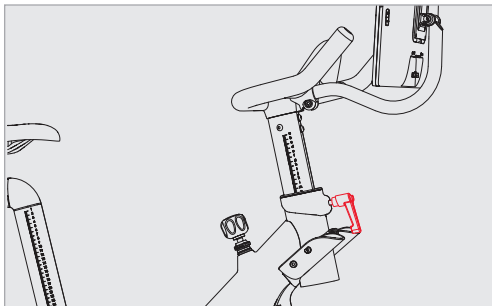

HANDLEBAR HEIGHT

Set the handlebars to seat height, then adjust until you feel comfortable.

- Turn L-handle counterclockwise to loosen
- Raise or lower the handlebars
- Turn L-handle clockwise to tighten

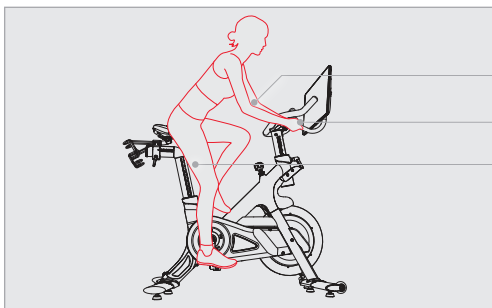


BODY POSITION

- Arms slightly bent
- Hands rest on handlebars without reaching
- Leg slightly bent at the bottom of the stroke

These adjustments should get you started. If you're uncomfortable, or want to fine-tune your bike's settings, go to support.onepeloton.com.

⚠ CAUTION The Peloton Bike has a direct driven flywheel; the pedals will continue to move until the flywheel stops. Reduce speed slowly. To stop the flywheel immediately, push down the resistance knob.


SETTING UP YOUR BIKE CONTINUED

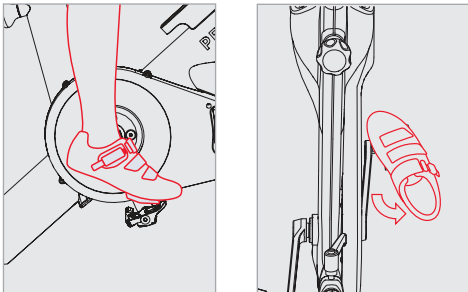

CLIPPING IN AND OUT

TO CLIP IN: Point your toes down to fit the cleat into the pedal, then push down through your heel.


TO CLIP OUT: Kick your heel away from the bike.

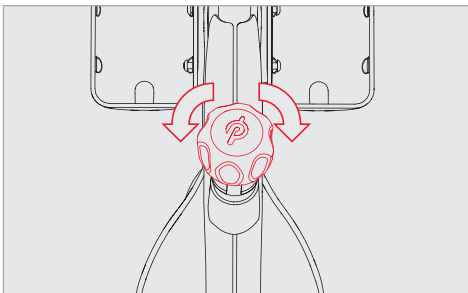

ADJUSTING RESISTANCE


- Turn knob right to increase resistance
- Turn knob left to decrease resistances
- Press knob down for emergency brake

GETTING STARTED

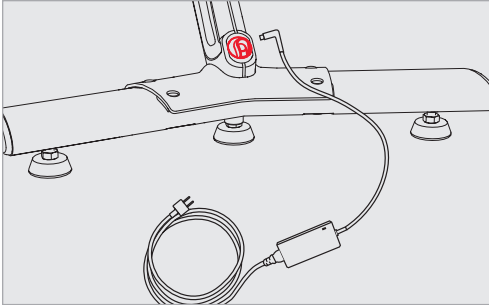

PLUGGING IN


- Plug the power supply into the wall
- Plug the power cord into the power jack at the back of the bike

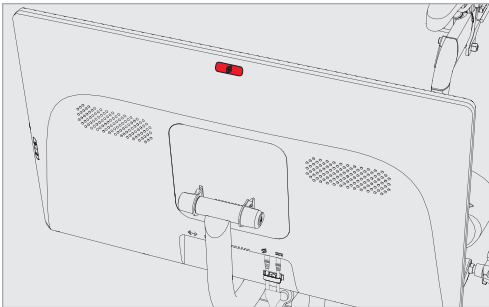

POWERING ON AND OFF

- Hold the power button for two seconds to power on the bike
- The bike will sleep after about 20 minutes of inactivity. To wake the bike, press the power button
- To power down, hold the power button for two seconds. Select **Shut Down** when prompted


GETTING STARTED CONTINUED

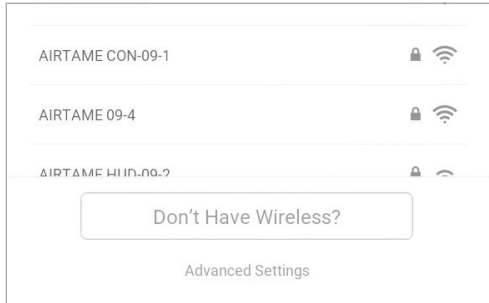

CONNECTING TO THE INTERNET

To connect to a WiFi network, tap the network name

- If the network is not secured, the bike will connect to the network
- If the network is secured, you will be prompted to enter a password. Type in the password and tap **Connect**

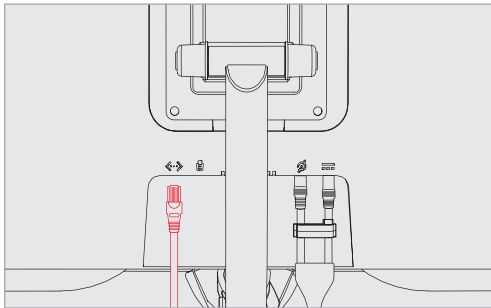

To connect to a wired network, connect an Ethernet cable to the Ethernet port on the back of the touchscreen and to a wall jack or router used by your local area network. The bike will connect to the network automatically.

LOGGING IN

When logging in for the first time, please have available your Subscription Activation Key or the login information you set up when you purchased the Peloton Bike.

Once a subscription is activated and associated with this bike, any user can log in and access subscription content.

ADDING A PROFILE

To let another person use your bike, tap the icon next to your username at the lower left of the screen and select **Add/Remove Profiles**. The new user can log in with an existing Peloton account or tap **Create an Account** to set up a new one.


PELOTON 101

Select Peloton 101 from the menu for more on adjusting your bike to fit your body and maintaining proper body position when you ride.

JOINING A RIDE

- Find live classes on the schedule or choose from on-demand classes.
- Filter by instructor, class length, class type, and more.
- Your instructor will guide you through your workout. If the workout does not include a warmup and cooldown, warmup and cooldown classes are available separately.
- Select **More** for a Scenic Ride or Just Ride experience.

CLASS SCREEN

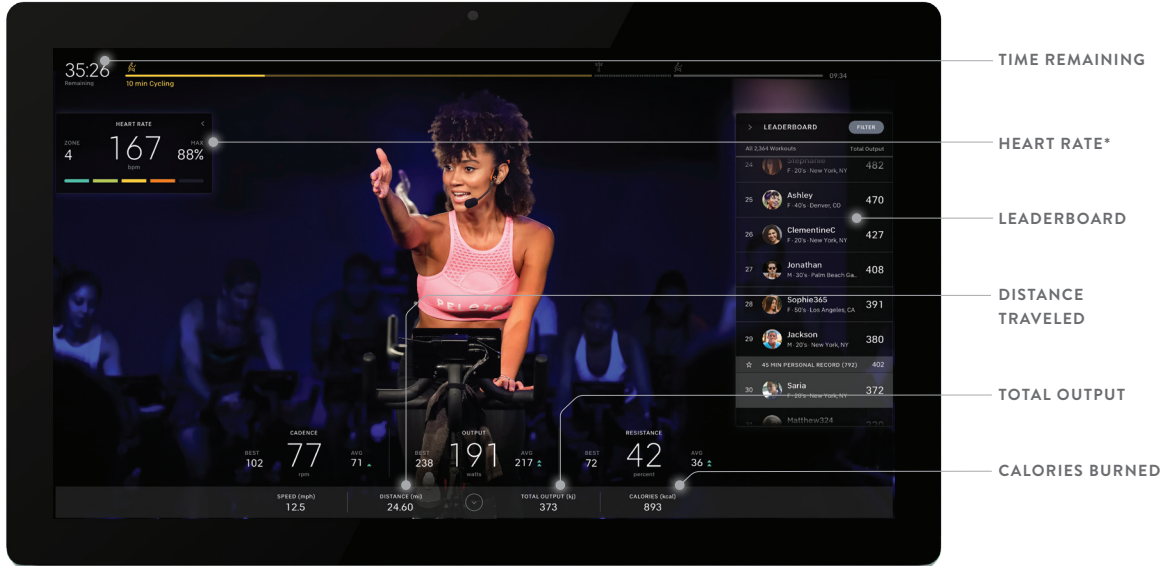

CADENCE

How fast you're pedaling, in revolutions per minute

OUTPUT


The power you're exerting, measured in watts

RESISTANCE

Pedaling difficulty, measured as a percentage

* Appears only when a heart rate monitor is connected.

MAINTENANCE AND CARE

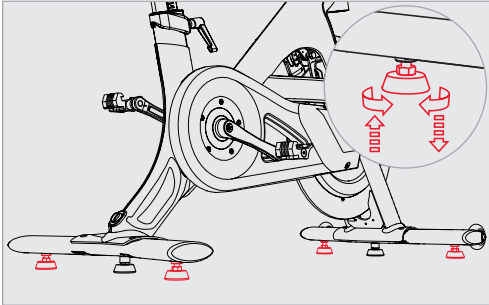


AFTER EVERY RIDE

⚠ CAUTION To ensure safe operation and optimal performance, check for wear and damage and perform maintenance on a regular basis. Replace any damaged or defective parts immediately. Do not use the bike until the repair is performed. Only use original parts from the manufacturer. Changes or modifications to this unit not expressly approved by Peloton could void the warranty.

CLEANING: Wipe down the bike using a damp cloth.

LEVELING FEET: If the bike rocks back and forth, turn each leveling foot clockwise (when viewed from above) until it rests firmly on the ground.

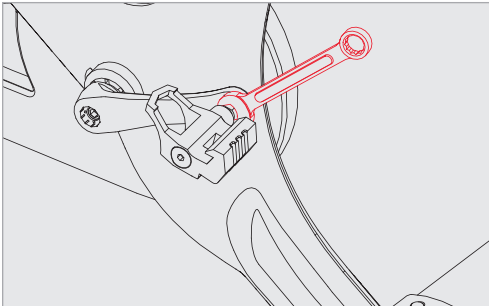


EVERY 3 TO 5 RIDES

CLEANING: Clean the bike thoroughly using a damp cloth and a mild household cleaner diluted in water. Clean the touchscreen using an electronics wipe.

PEDALS: Tighten any loose pedal with the included 15 mm wrench. Pedals should be tightened to 25 lb-ft of torque. Turn clockwise to tighten the right pedal and counterclockwise to tighten the left pedal.


MAINTENANCE AND CARE CONTINUED

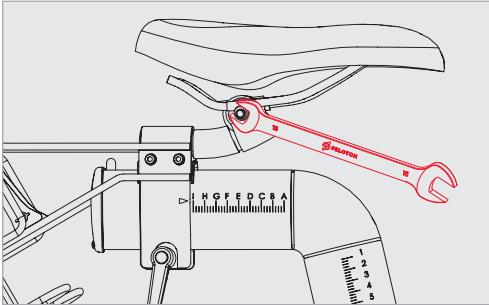

EVERY 3 TO 5 RIDES CONTINUED

CLEATS: Use a 4mm Allen wrench to tighten any loose screws attaching your cleats to your cycling shoes.

SADDLE: Make sure the saddle is parallel to the ground. Then use the included 13mm wrench to tighten the seat-fixing nuts on both sides.

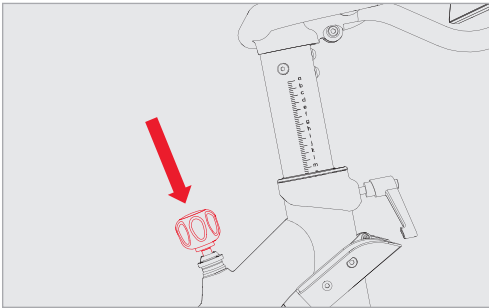


EVERY 15 TO 20 RIDES

⚠ CAUTION Service other than the procedures described here must be performed by an authorized technician.

EMERGENCY BRAKE: Press down on the resistance knob while pedaling slowly. The flywheel should come to a complete stop immediately. If it does not, stop using the bike immediately and contact Peloton Support.

FRAME: Check the entire frame for signs of wear and damage, and tighten any loose bolts.

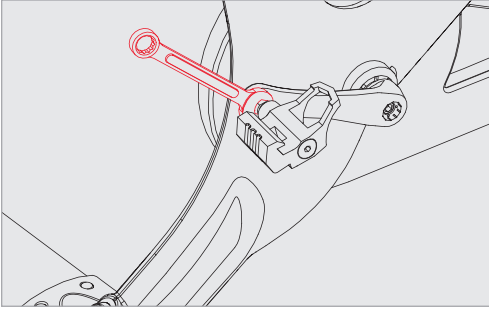

ANNUALLY

PEDALS: Replace pedals. Tighten new pedals to 25 lb-ft of torque. For further instructions, see support.onepeloton.com.


BIKE ASSEMBLY


BIKE PARTS

- 1 Bike frame
- 2 Front stabilizer
- 3 Rear stabilizer
- 4 M8×20 socket cap screw × 8
- 5 Right and left pedals
- 6 Handlebar post
- 7 M8×12 round head screw × 2
- 8 M8×10 round head screw × 2
- 9 Flat washer × 4
- 10 M5×15 Phillips head screw
- 11 Handlebars
- 12 Water bottle holder cups × 2
- 13 M5×8 stainless steel screws × 4
- 14 Touchscreen arm
- 15 Touchscreen
- 16 M4×10mm flange head screws × 4
- 17 Right and left weight holders
- 18 M5 washer × 4
- 19 M5 spring washer × 4
- 20 M5×8 round head screw × 4
- 21 Power supply and cord

TOOLS










- 3mm Allen wrench
- 4mm Allen wrench
- 5mm Allen wrench
- 6mm Allen wrench
- Phillips head screwdriver
- Torque wrench with 15mm crowfoot attachment





 **WARNING** These assembly instructions are intended to assist trained professional installers in assembling the Peloton Bike. Damage or equipment failure resulting from the improper or negligent assembly of the bike will not be covered under Peloton's warranties.

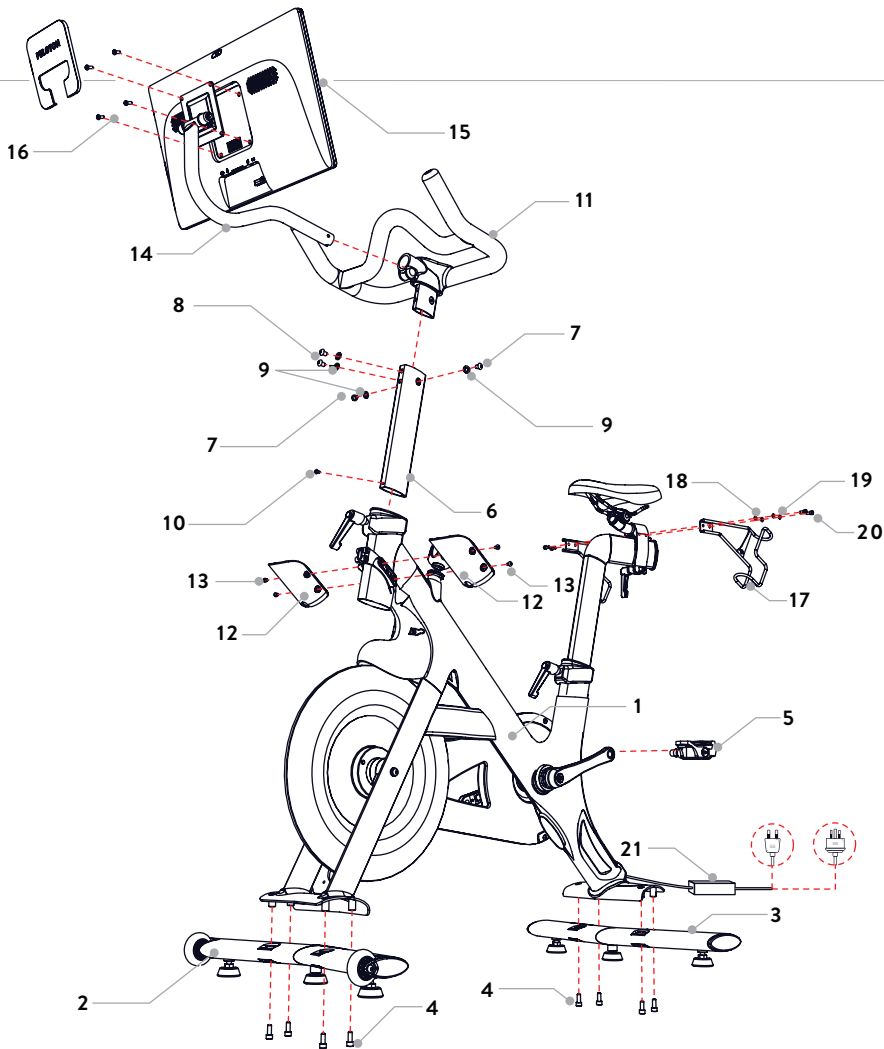

WARNING Perform a complete visual inspection of the Peloton Bike and test all features and functions prior to use.

BIKE ASSEMBLY CONTINUED

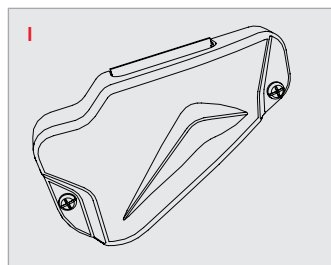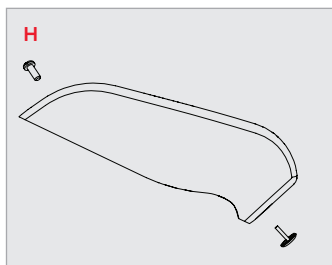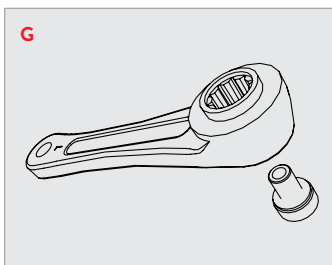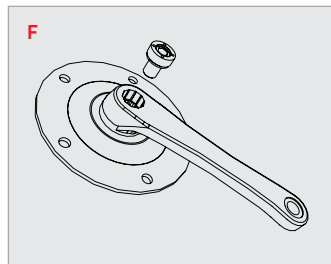
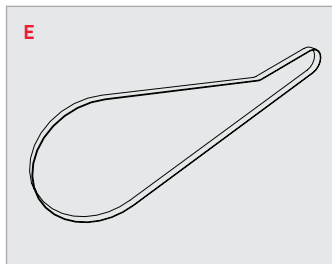
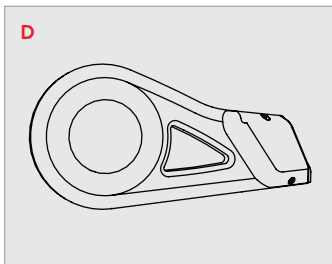
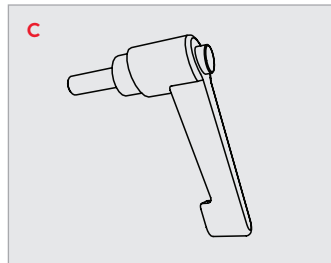
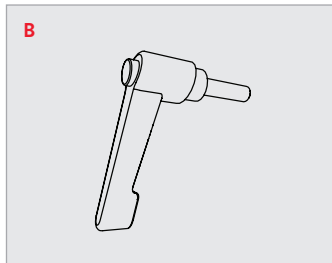
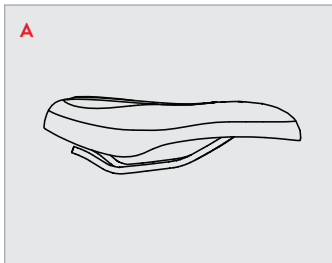


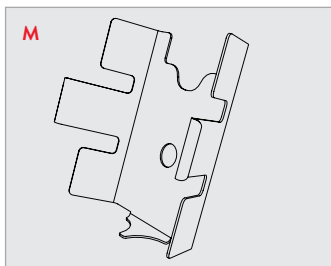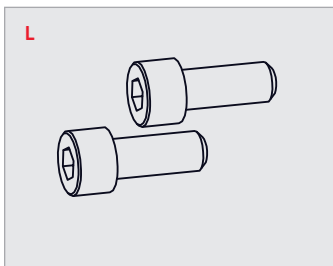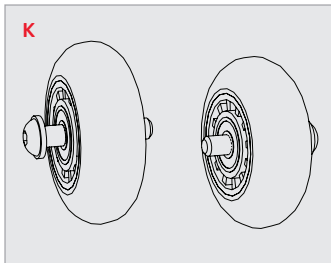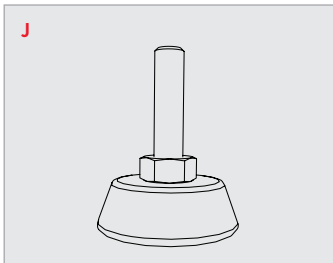

SPARE PARTS







- A** Saddle SP-03-1
- B** Small L-handle SP-06/RP-06
- C** Large L-handle SP-07/RP-07
- D** Outer Belt Guard SP-11-12
- E** Belt SP-15
- F** Right Crank Arm SP-11-17
- G** Left Crank Arm SP-11-19
- H** Front Belt Guard SP-11-26
- I** Sensor Assembly SP-27-2/RP-27
- J** Foot SP-31
- K** Wheels SP-32
- L** Stabilizer Screw Set SP-35
- M** Wire Bracket SP-41/RP-41
- Monitor Cable SP-39
- Inner Wiring SP-38/RP-38
- Label package PL-11-KIT
- Pedals PL-PS7-02-L/R
- Weight Holders SP-09/RP-09
- Front Stabilizer SP-33/RP-33
- Rear Stabilizer SP-34/RP-34
- Handlebars SP-43/RP-43

BIKE ASSEMBLY CONTINUED

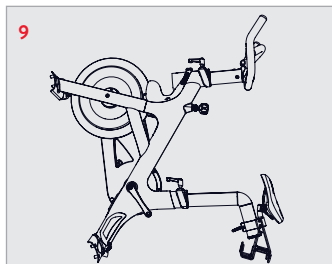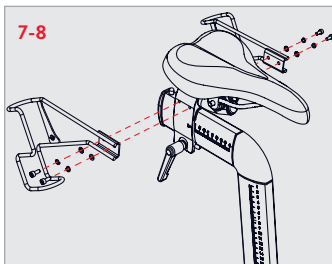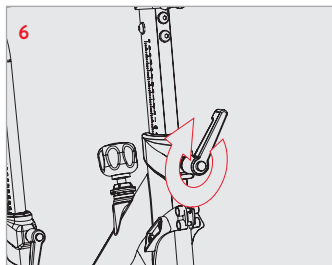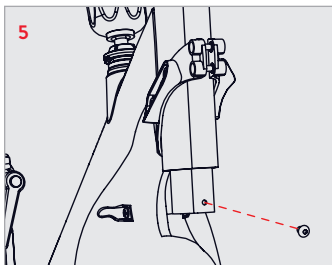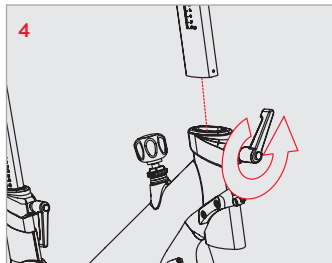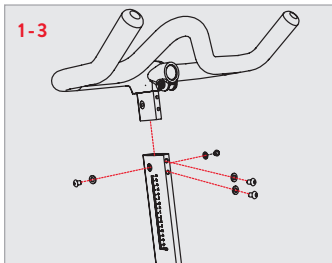

ASSEMBLY






- 1 Fit the handlebar post onto the handlebars. Make sure the letters on the post will be upright when the handlebar is right-side-up.
- 2 Add two flat washers and two M8x12 round head screws to the front of the handlebar base. Screw them in with a 5mm Allen wrench.
- 3 Add two flat washers and two M8x10 round head screws to the sides of the handlebar base. Screw them in with the 5mm Allen wrench.
- 4 Loosen the L-handle at the front of the bike frame and slide the handlebar post into the head tube.
- 5 Add an M5x15 Phillips head screw to the hole at the end of the handlebar post. Screw it in using a Phillips head screwdriver.
- 6 Raise the handlebars to seat height and tighten the L-handle.
- 7 Take four M5x12 round head screws and add one flat washer and one spring washer to each.
- 8 Secure each weight holder to the seat slider using two screw-and-washer sets and a 4mm Allen wrench.
- 9 Rest the bike frame on the weight holders and back foot.

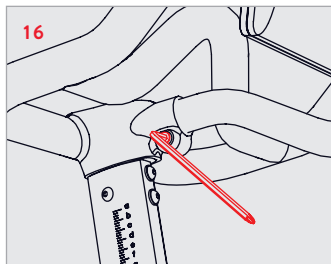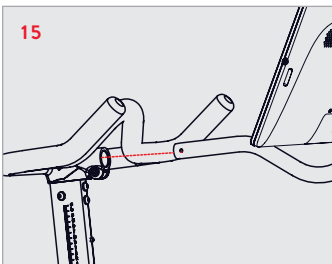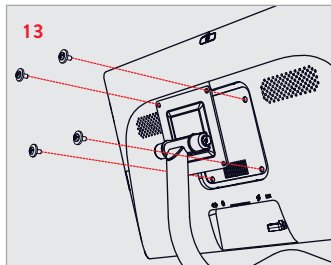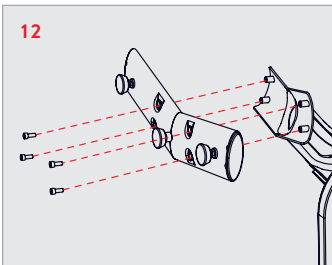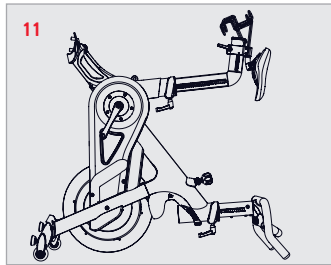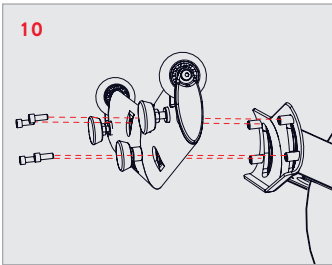

ASSEMBLY CONTINUED

- 10** Add the front stabilizer and four M8x20 socket cap screws. Screw them in with a 6mm Allen wrench.
- 11** Rest the bike frame on the handlebars and front stabilizer.
- 12** Add the rear stabilizer and four M8x20 socket cap screws. Screw them in with the 6mm Allen wrench.
- 13** Remove the square panel from the back of the touchscreen. Using a Phillips head screwdriver and four M4x10 flange head screws, secure the touchscreen to the monitor arm.
- 14** Return the back panel to the touchscreen.
- 15** Push the monitor arm all the way into the handlebars.
- 16** Tighten the bolt at the right side using the 6mm Allen wrench.

BIKE ASSEMBLY CONTINUED

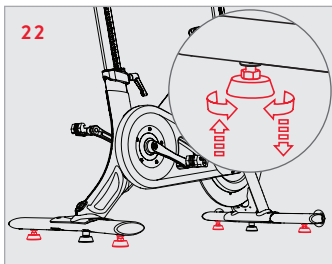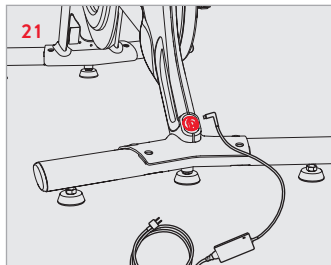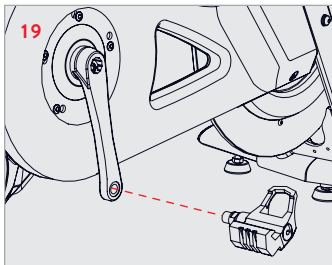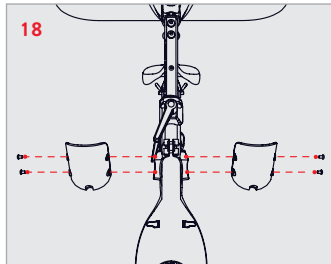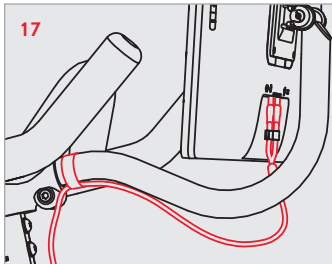

ASSEMBLY CONTINUED

- 17** Plug the monitor cable into the back of the touchscreen. Use the velcro strap to secure it to the monitor arm.
- 18** Add a water bottle cup to each side of the front shroud using two M5x8 screws and a 3mm Allen wrench.
- 19** Screw the pedals into the crank arms. The left pedal is reverse-threaded.
- 20** Using a torque wrench and a 15mm crowfoot, tighten each pedal to 25 lb-ft. Be careful not to over-tighten the pedals.
- 21** Plug the power cord into the power supply and the back of the bike. Plug the power supply into an outlet.
- 22** Check that the bike is stable. If it rocks or wobbles, adjust the outer feet on each stabilizer until all feet rest firmly on the ground.

LIMITED HOME USE WARRANTY*

Peloton Interactive, Inc. ("Peloton") extends the following Limited Warranty, which applies only to non-commercial, in-home, indoor use of the Peloton Bike. Any other use of the Peloton Bike shall void this Limited Warranty. During the applicable Limited Warranty periods described below, the covered components of the Peloton Bike will be free of defects or malfunctions during normal use. Certain exclusions apply, as further described in this Limited Warranty.

The Limited Warranty applies for the following components of the Peloton Bike only, for the time period indicated. The Limited Warranty applies only against defects discovered within the applicable Limited Warranty period and only so long as the Peloton Bike remains in the possession of the original purchaser, or, for gifted Peloton Bikes, the owner of the original Subscription attached to that Peloton Bike.

HD TOUCHSCREEN: 12 MONTHS

Peloton warrants the touchscreen against defects in workmanship and materials for a period of 12 months

from the date of original delivery.

FRAME: FIVE YEARS

Peloton warrants the frame (excluding any moving parts attached to the structural frame) against defects in workmanship and materials for a period of five years from the date of original delivery.

BIKE COMPONENTS: 12 MONTHS

Peloton warrants the components and all original parts of the Peloton Bike other than pedals, including its belt, brake resistance, crank shaft, seatpost, handlebars and water bottle holder, against defects in workmanship and materials for a period of 12 months from the date of original delivery.

BIKE PEDALS: 12 MONTHS

Peloton warrants the components and all original parts of the original pedals that come with the Peloton Bike against defects in workmanship and materials for a period of 12 months from the date of original delivery. Bike pedals are not warranted against normal wear and tear and it is

important that you maintain the pedals by inspecting the pedals regularly for any damage, loose parts or other signs of wear and tear that could cause breakdowns or part failures.

Any pedal that shows signs of worn or damaged parts should be removed from service immediately. Please refer to Peloton's guide on maintaining your pedals, available on Peloton's website.

LABOR: 12 MONTHS

For Peloton Bikes originally assembled by an authorized Peloton technician, Peloton will cover the labor cost for the repair or replacement made under this Limited Warranty for a period of 12 months from the date of original delivery. Except where applicable law requires otherwise, repair labor is not covered for locations where Peloton did not originally assemble the Peloton Bike or if the Peloton Bike is moved to a location that is outside of Peloton's service area.

EXCLUSIONS AND LIMITATIONS

WHO AND WHAT IS COVERED:
The original owner of the Peloton Bike.

LIMITED HOME USE WARRANTY* CONTINUED

The Peloton Bike must remain in the possession of the original purchaser, or, for gifted Peloton Bikes, the owner of the original Subscription attached to that Peloton Bike. This Limited Warranty is not transferable.

If a defect arises in the Peloton Bike or a warranted component within the applicable Limited Warranty period, the purchaser's sole and exclusive remedy is for Peloton to, at Peloton's discretion to the extent permitted by law, either replace or repair the defective or malfunctioning Peloton Bike or component with the same or a comparable model. Any replacement or repaired component shall be warranted for the remainder of the original Limited Warranty period or 30 days, whichever is longer, or for any additional period that is required by applicable law.

WHAT IS NOT COVERED:

Any other Peloton products or services, non-Peloton products or labor, units that are, or that Peloton reasonably believes to be, stolen, counterfeit, or purchased from an unauthorized distributor or reseller, units purchased or used outside the U.S. or Canada, and units missing serial numbers.

Software, even if sold with or embedded in the Peloton Bike, or Internet connectivity. Peloton does not warrant that the operation of the Peloton Bike will be uninterrupted or error-free.

Damage or equipment failure due to normal wear and tear, improper or negligent assembly, maintenance, installation, relocation, or repair (other than that caused by a Peloton authorized service technician), use of the Peloton Bike with parts or accessories from third parties, or with parts or accessories not originally intended for or compatible with the Peloton Bike, or any use contrary to the instructions in the Peloton Bike User Manual.

Damage or equipment failure due to accident, abuse, improper or abnormal use, neglect, corrosion, discoloration of paint or plastic (or any other change in cosmetic appearance that does not affect performance), theft, vandalism, fire, flood, wind, lightning, freezing or other natural disasters or acts of God of any kind, electrical wiring, power reduction, power fluctuation or power failure from whatever cause, unusual

atmospheric conditions, collision, introduction of foreign objects, or modifications that are unauthorized or not recommended by Peloton.

Incidental or consequential damages. Peloton is not responsible or liable for indirect, special, incidental or consequential damages, economic loss, loss of property or profits, loss of enjoyment or use, or other consequential damages of any nature whatsoever in connection with the purchase, use, repair or maintenance of equipment or parts. Peloton does not provide monetary or other compensation for any such repairs or replacement parts costs, including but not limited to gym membership fees, work time lost, cost of substitute equipment, diagnostic visits, maintenance visits or transportation.

Equipment used for commercial purposes or for any use other than a single family or household.

Any attempt to move or repair fitness equipment creates a risk of injury and property damage. Peloton is not responsible or liable for any damage or injury incurred during, or as a result

of, any move, repair or attempted repair of equipment by anyone other than a Peloton authorized service technician. All moves or repairs attempted by you or your agents are undertaken AT YOUR OWN RISK and Peloton shall have no liability for any injury to person or property arising from such attempted moves or repairs. In addition, labor may no longer be covered if you move outside of Peloton's service area.

Where permitted by law, replacement units, parts and electronic components reconditioned to as-new condition by Peloton or its vendors may sometimes be supplied as warranty replacement and constitute fulfillment of warranty terms.

EXTENDED WARRANTY SERVICE

Extended warranty coverage is available for purchase through Peloton's authorized partner. See support.onepeloton.com for more details.

HOW TO OBTAIN WARRANTY SERVICE

To be eligible for service under this

Limited Warranty you must contact the Peloton Support team. You will be asked to provide Peloton with the serial number of your Peloton Bike and the dated receipt, or other proof of purchase indicating the date purchased, upon discovering any nonconformity or defect.

Claims must be made within the specified warranty period.

Any disputes between you and Peloton related to this Limited Warranty or the Peloton Bike will be governed by the then-current dispute resolution procedures in Peloton's Terms of Service, available at www.onepeloton.com/terms-of-service.

*This limited warranty is the exclusive warranty given by Peloton and supersedes any prior, contrary or additional representations. All other warranties, express or implied, including any statutory warranty or condition of merchantability or fitness for a particular purpose, are disclaimed except to the extent prohibited by law. In such event, such warranty is limited to the duration of the warranty periods set forth above.

This exclusion applies even if this warranty fails of its essential purposes and regardless of whether damages are sought for breach of warranty, breach of contract, negligence, or strict liability in tort or under any other legal theory. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you. This limited warranty gives you specific legal rights, and you may also have other legal rights, which vary from state to state.

In Studio with Kendall Toole





SUPPORT

QUESTIONS OR CONCERNS

Peloton's #1 concern is member satisfaction. If you require assistance or are experiencing issues with your Peloton Bike, please contact the member support team for additional help.



US: 1.866.679.9129

Canada: 1.833.821.0099



support.onepeloton.com

support.onepeloton.ca



Peloton Interactive, Inc.

441 9th Avenue, 9th Fl

New York, NY 10001

Attn: Limited Warranty Claims



PL-01 | 00001-3.0

© Peloton 2021, Peloton Interactive, Inc. All rights reserved.

onepeloton.com